

 
INSTALLATION INSTRUCTIONS

USA

FLIGHT

VERTICAL SUSPENSION SUPPORT

ART. NO. 225 020g gold, vertical
 225 020mc matte chrome, vertical



IMPORTANT SAFETY INSTRUCTIONS



1. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH LOCAL AND NATIONAL CODE.
2. Save these instructions and refer to them when additions to or changes to the track configuration are made.
3. Do not install this track in damp or wet locations.
4. Do not install any part of the track less than 7 feet above the floor.
5. CAUTION - Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
6. To reduce the risk of fire and electric shock, do not attempt to connect power tools, extension cords, appliances, and the like to the track.
7. This track system MUST BE HARD WIRED. For all the wire connections, use Listed Wire Nuts.
8. Total wattage of the system must never exceed 300W or wattage supplied by the low-voltage transformer.
9. Secondary connections must be clean and tight to avoid arcing and overheating!
10. Turn off power prior to any work on the systems.
11. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE FIXTURE

Contents of Delivery:

Vertical suspension support - qty. (1)

Note: The track should be bent into its desired shape prior to mounting any supports so that the mounting positions can be marked on the ceiling. Supports should be mounted approximately every three feet.

Step 1

- Unscrew the mounting base (A) from the upper support (B) and insert mounting screw (C) to attach to the ceiling base. Screw the upper support back onto the mounting base.

Step 2

 
 
- Adjust the length of the cord (D) if necessary by loosening the two set screws (E). Cut the cord to desired length and re-insert. Tighten the set screws.

Step 3

- Slide the Flight track (F) into the groove of the lower support (G). Tighten the set screw (H) firmly to secure the track.

Note: Multiple lower supports (G) may be connected together by pulling the aircraft cable through the hole (I) on the bottom; ideal for spiral Flight Track.

FRONT VIEW

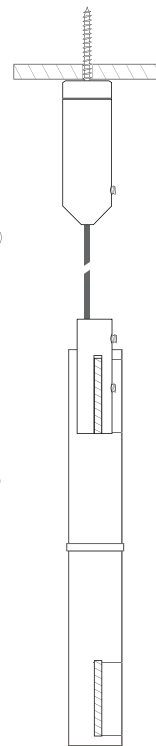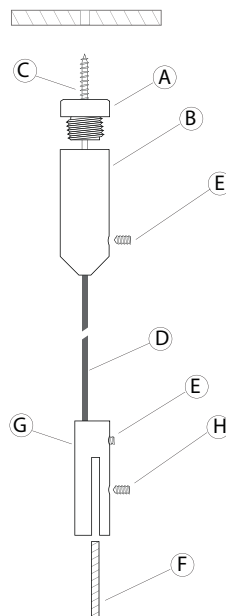

SIDE VIEW

