


# INSTALLATION INSTRUCTIONS

USA

## FLEX-LINE

### SLOPED CEILING SUSPENSION

ART. NO. 230 100 matte chrome, 36"

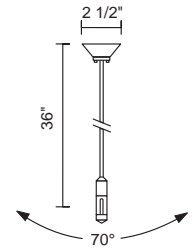

## IMPORTANT SAFETY INSTRUCTIONS



1. Read all instructions!
2. Turn off power prior to any work on the canopy.
3. Turn off power prior to adding or changing the configuration of the track.
4. Do not install this track in a damp or wet location
5. Only BRUCK Flex-line system components may be used for assembly of this system.
6. Only BRUCK fixtures and components may be mounted on the system
7. Never connect the system and lamps directly to the main power source without the use of a transformer. This system must be used in conjunction with low voltage, 12V transformer.
8. Total wattage of the system must never exceed the wattage supplied by the low voltage transformers. BRUCK recommends an average load of 250W for a 300W transformer.
9. CAUTION! Lamps and fixtures become hot during operation
10. Observe the stated minimum distance of the illuminants to flammable objects.
11. Do not install the track or any part which contains exposed wires less than 7 ft. from the floor.
12. Do not hang any objects over the system; short circuit and fire hazard.
13. Warranty is void in case of unauthorized modifications and/ or improper use.

## READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE SYSTEM

### Note:

- Ceiling support locations should be marked off prior to installation. (use the planning aid below).
- Supports should be placed approximately every three feet. (exact conditions may vary)
- Ceiling support rod should be cut prior to installation. (refer to shortening instructions)

- Place the ceiling mount plate (A) in the desired location and secure to the ceiling) with mounting screw (B).

- Insert the ball end of the support rod (C) into the mount plate.

- Slip the metal washer (D) through the support rod (E) and align the set-screws with the holes (F) in the mount plate. Tighten the screws while keeping the rod at the desired angle. Make sure the set -screws are tightened firmly.

- Place the Flex-Line track support head (G) onto the end of the support rod and tighten the screws located on the side. Adjust the orientation of the track head prior to tightening the screws firmly.

- Unscrew the tip of the track support head (H) to allow simple attachment of the Flex-Line track to the Sloped Ceiling Support. Re-tighten the tip to complete the installation.

### SHORTENING THE SUPPORT ROD

- Remove the support rod from the track support head.
- Cut the rod to the desired length.
- Reinsert the track support head and tighten the side screws.

