


INSTALLATION INSTRUCTIONS

ORION SERIES

LED DRIVER

Art. No. D-60 60W driver

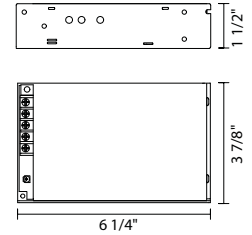

IMPORTANT SAFETY INSTRUCTIONS



1. Read all instructions!
2. Turn off power prior to any work on the systems.
3. Only a qualified electrician should install this hard wired driver.
4. Only for installation in dry locations.
5. Total wattage of the system must never exceed the wattage supplied by the low voltage driver.
6. Input: 85 - 264 VAC / 47 - 63 Hz.
7. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE SYSTEM

Contents of Delivery:
 D-60W Driver - qty. (1)

FRONT VIEW

Mounting: To mount the driver, screws may be attached in any of the various mounting points (mounting screws not included).

Grounding: The driver must be grounded by connecting the ground wire to the driver terminal block, marked with the \perp symbol.

Output Connections: *this driver is designed for use with the ORION BELT only!
 Connect the power supply cable from the ORION BELT to the terminal blocks, marked -v and +v. Tighten the screws firmly.

Input Connections: Connect the line and neutral wires from the primary to the driver terminal blocks, marked L and N respectively. Tighten the screws firmly.

The system is now ready...you can turn on the lights!

Testing Driver Voltage

Before attaching Orion Belt Power Feed to the track, test voltage at Power Feed. Voltage at Power Feed should be 24 Volts.

